


Accu-Lock®

Playfield Leveling/Adjustment Instructions Metal Adjuster

- Tools needed: 9/16 open end wrench and a 9/16 socket wrench.
- Place one ea. 3/8" hex nut (part #1) followed by a 3/8" x 1 1/2" washer (part #2) on each 3/8" x 5.5" bolt (part #3) and insert through the bottom of the metal climatic adjusters center hole.
- Now place a 3/8" x 1 1/2" washer (part #2) followed by two ea. 3/8" hex nuts (part #1) on the top of the same bolt (part #3).
- Attach the center bolt loosely into the center insert on the underside of the playfield to allow alignment of the climatic adjuster with the two outer playfield inserts.
- Insert a 3/8" x 1 1/2" washer (part #2) and a 1/4" x 4 1/2" bolt (part #4) through the two outer climatic adjuster holes and attach to the playfield inserts finger tight.
- Utilizing the provided metal straight edge, determine if the playfield needs to be adjusted upwards or adjusted downwards.
- If the metal straight edge rocks side to side, the playfield is high in the center and the center bolt needs to be adjusted to pull the playfield downwards.
- If there is a gap or noticeable light seen between the straight edge and the center of the playfield, the playfield is low in the center and the center bolt needs to be adjusted to raise the center of the playfield upwards.
- Please refer to the "How to/Rules" section on www.olhausenbilliards.com to view an instructional video on the leveling/adjustment procedures.
- Periodic adjustments may be needed based on the climatic conditions of the room where the table is located.

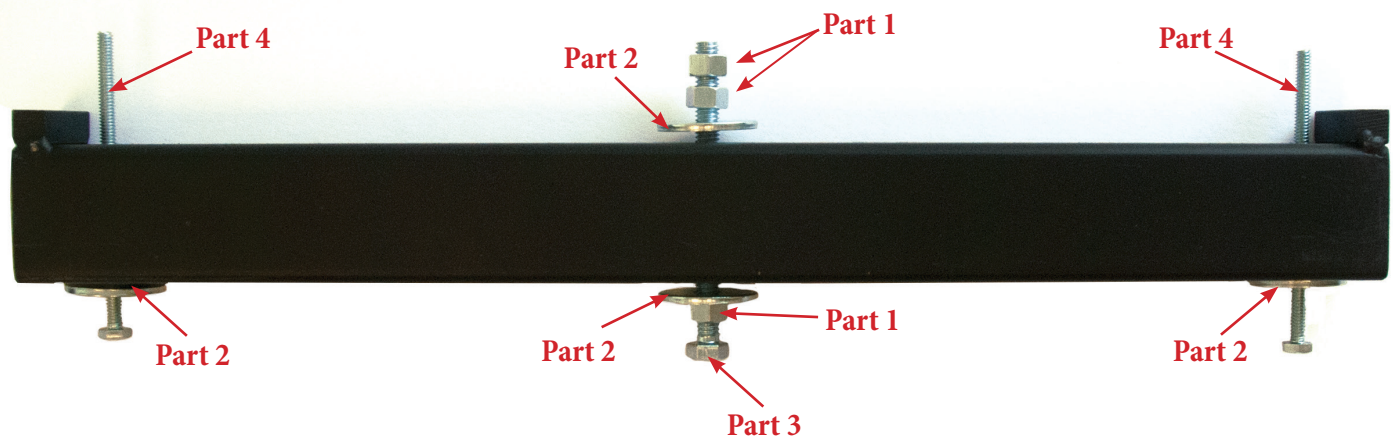

Please contact Donny Olhausen at (615) 681-6168 with any additional questions.

Olhausen Billiards · 1124 Vaughn Parkway · Portland · TN · 37148 (615)916-5497 (615)323-7585 Fax