

Accu-Lock®

- ▶ Low Center “Concave” Playfield Adjustment Instructions
- ▶ Push your center bolt (5” for wood adjuster, 4” for metal adjuster) into the center hole of the adjuster
- ▶ Take 3/8” nut and screw it down to just above the top of the adjuster
- ▶ Screw center bolt into the board insert with some slack enough to line up the outside bolts
- ▶ Place the 1/2” shims on the outside of the outer adjuster bolts. Tighten them to snug. Do not over tighten these bolts
- ▶ With the 9/16” open end wrench on the nut above the center adjuster and a 9/16” socket on the head of the center bolt, hold the center bolt in place while tightening the nut above the adjuster. This will add pressure to the playfield and lift the center to the desired height and level for accurate play. (This may need to be re-adjusted from time to time to ensure flatness).

Please call Donny Olhausen with any questions 615.681.6168

Wooden Adjuster for 16' Board

